

# MCP1630 Low-Cost Li-Ion Battery Charger Reference Design User's Guide

#### Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our
  knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data
  Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- · Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not
  mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WAR-RANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip's products as critical components in life support systems is not authorized except with express written approval by Microchip. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

#### **Trademarks**

The Microchip name and logo, the Microchip logo, Accuron, dsPIC, KEELOQ, microID, MPLAB, PIC, PICmicro, PICSTART, PRO MATE, PowerSmart, rfPIC, and SmartShunt are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

AmpLab, FilterLab, Migratable Memory, MXDEV, MXLAB, PICMASTER, SEEVAL, SmartSensor and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Application Maestro, dsPICDEM, dsPICDEM.net, dsPICworks, ECAN, ECONOMONITOR, FanSense, FlexROM, fuzzyLAB, In-Circuit Serial Programming, ICSP, ICEPIC, Linear Active Thermistor, MPASM, MPLIB, MPLINK, MPSIM, PICkit, PICDEM, PICDEM.net, PICLAB, PICtail, PowerCal, PowerInfo, PowerMate, PowerTool, Real ICE, rfLAB, rfPICDEM, Select Mode, Smart Serial, SmartTel, Total Endurance, UNI/O, WiperLock and Zena are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

 $\ensuremath{\mathsf{SQTP}}$  is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

Printed on recycled paper.

QUALITY MANAGEMENT SYSTEM

CERTIFIED BY DNV

ISO/TS 16949:2002

Microchip received ISO/TS-16949:2002 quality system certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona and Mountain View, California in October 2003. The Company's quality system processes and procedures are for its PICmicro® 8-bit MCUs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.



## **Table of Contents**

Drofooo	- 1
Preface	I
Chapter 1. Product Overview	
1.1 Introduction	5
1.2 What is the MCP1630 Low-Cost Li-Ion Battery Charger?	6
1.3 What the MCP1630 Low-Cost Li-Ion Battery Charger Kit Includes	6
Chapter 2. Installation and Operation	
2.1 Introduction	7
2.2 Features	7
2.3 Getting Started	8
Appendix A. Schematic and Layouts	
A.1 Introduction	11
A.2 Board Schematic	12
A.3 Board – Assembly Drawing	13
A.4 Board – Top Overlay	14
A.5 Board – Top Layer	15
A.6 Board – Bottom Layer	16
Appendix B. Bill Of Materials (BOM)	
Appendix C. Evaluation Board Firmware	
C.1 Device Firmware	19
Worldwide Sales and Service	20

MCP 1630 Low-Cost Battery Charger User's Guide				
NOTES:				



#### **Preface**

#### **NOTICE TO CUSTOMERS**

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a "DS" number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is "DSXXXXXA", where "XXXXXX" is the document number and "A" is the revision level of the document.

#### INTRODUCTION

This chapter contains general information that will be useful to know before using the MCP1630 Low-Cost Li-Ion Battery Charger. Items discussed in this chapter include:

- Document Layout
- · Conventions Used in this Guide
- · Recommended Reading
- The Microchip Web Site
- Customer Support
- Document Revision History

#### **DOCUMENT LAYOUT**

This document describes how to use the MCP1630 Low-Cost Li-Ion Battery Charger as a development tool to emulate and debug firmware on a target board. The manual layout is as follows:

- Chapter 1. "Product Overview" Important information about the MCP1630 Low-Cost Li-Ion Battery Charger.
- Chapter 2. "Installation and Operation" Includes instructions on how to get started with this demo board and a description of the demo board.
- Appendix A. "Schematic and Layouts" Shows the schematic and layout diagrams for the MCP1630 Low-Cost Li-Ion Battery Charger.
- Appendix B. "Bill Of Materials (BOM)" Lists the parts used to build the MCP1630 Low-Cost Li-Ion Battery Charger.
- Appendix C. "Evaluation Board Firmware" Provides information about the application firmware and where the source code can be found.

#### **CONVENTIONS USED IN THIS GUIDE**

This manual uses the following documentation conventions:

#### **DOCUMENTATION CONVENTIONS**

Description	Represents	Examples	
Arial font:			
Italic characters	Referenced books	MPLAB <sup>®</sup> IDE User's Guide	
	Emphasized text	is the only compiler	
Initial caps	A window	the Output window	
	A dialog	the Settings dialog select Enable Programmer	
	A menu selection		
Quotes	A field name in a window or dialog	"Save project before build"	
Underlined, italic text with right angle bracket	A menu path	<u>File&gt;Save</u>	
Bold characters	A dialog button	Click <b>OK</b>	
	A tab	Click the <b>Power</b> tab	
N'Rnnnn	A number in verilog format, where N is the total number of digits, R is the radix and n is a digit.	4'b0010, 2'hF1	
Text in angle brackets < >	A key on the keyboard	Press <enter>, <f1></f1></enter>	
Courier New font:			
Plain Courier New	Sample source code	#define START	
	Filenames	autoexec.bat	
	File paths	c:\mcc18\h	
	Keywords	_asm, _endasm, static	
	Command-line options	-Opa+, -Opa-	
	Bit values	0, 1	
	Constants	0xFF, 'A'	
Italic Courier New	A variable argument	file.o, where file can be any valid filename	
Square brackets []	Optional arguments	mcc18 [options] file [options]	
Curly brackets and pipe character: {   }	Choice of mutually exclusive arguments; an OR selection	errorlevel {0 1}	
Ellipses	Replaces repeated text	<pre>var_name [, var_name]</pre>	
	Represents code supplied by user	<pre>void main (void) { }</pre>	

#### RECOMMENDED READING

This user's guide describes how to use the MCP1630 Low-Cost Li-Ion Battery Charger. The following Microchip documents are available and recommended as supplemental reference resources.

MCP1630 Data Sheet, "High-Speed, Microcontroller-Adaptable, Pulse Width Modulator", DS21896

This data sheet provides detailed information regarding the MCP1630 product family.

MCP6291/2/3/4/5 Data Sheet, "1.0 mA, 10 MHz, Rail-to-Rail Op Amp", DS21812

This data sheet provides detailed information regarding the MCP6291/2/3/4/5 product family.

PIC12F683 Data Sheet, "8-Pin Flash-Based, 8-Bit CMOS Microcontrollers with nanoWatt Technology", DS41211

This data sheet provides detailed information regarding the PIC12F683 product family.

#### THE MICROCHIP WEB SITE

Microchip provides online support via our web site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- Product Support Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- General Technical Support Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- Business of Microchip Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

#### **CUSTOMER SUPPORT**

Users of Microchip products can receive assistance through several channels:

- · Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support
- Development Systems Information Line

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: http://support.microchip.com

#### **DOCUMENT REVISION HISTORY**

#### **Revision B (November 2005)**

- Updated Fast Charge Current to 1.5A.
- Added Constant Voltage Charge Calibration.

#### Revision A (June 2005)

· Initial Release of this Document.



## **Chapter 1. Product Overview**

#### 1.1 INTRODUCTION

The MCP1630 Low-Cost Li-Ion Battery Charger is used to evaluate Microchip's MCP1630 in a SEPIC power converter application. As provided, the MCP1630 Low-Cost Li-Ion Battery Charger is capable of charging a single-cell, Li-Ion battery pack from an input voltage of 6V to 18V. The MCP1630 Low-Cost Li-Ion Battery Charger provides a constant current, constant voltage charge with preconditioning, cell temperature monitoring and battery pack fault monitoring. Also, the charger provides a status or fault indication. The MCP1630 Low-Cost Li-Ion Battery Charger automatically detects the insertion or removal of a battery pack.

This chapter covers the following topics:

- What is the MCP1630 Low-Cost Li-Ion Battery Charger?
- What the MCP1630 Low-Cost Li-Ion Battery Charger Kit Includes

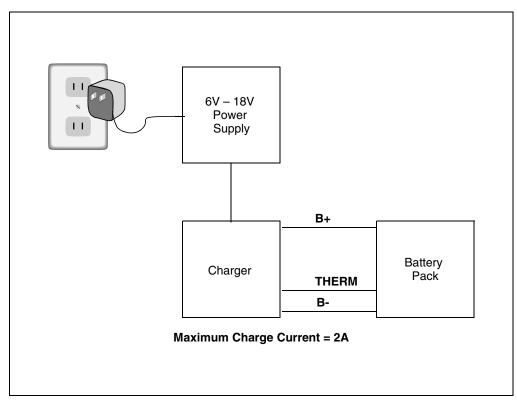


FIGURE 1-1: MCP1630 Low-Cost Li-Ion Battery Charger System Block Diagram.

#### 1.2 WHAT IS THE MCP1630 LOW-COST LI-ION BATTERY CHARGER?

The MCP1630 Low-Cost Li-lon Battery Charger is a complete stand-alone constant current, constant voltage battery charger for single-cell Li-lon battery packs. Different battery chemistries (i.e. three NiMh or NiCd batteries connected in series) can be charged with minor modifications to the firmware. Multiple series cell Li-lon battery packs can be charged with minor modifications to the hardware.

This board utilizes Microchip's MCP1630 (high-speed PIC® MCU PWM MSOP8), MCP6292 (dUAL op-amp MSOP8), and PIC12F683 (Flash MCU SOIC8). The input voltage range for the demo board is 6V to 18V. The output is capable of charging at a fast charge rate of 2A constant current.

An input terminal block is provided to apply the input voltage to the charger. An output header is also provided as a means to connect the external battery pack or simulated battery load. A programming header is available for updating the firmware contained in the PIC12F683.

## 1.3 WHAT THE MCP1630 LOW-COST LI-ION BATTERY CHARGER KIT INCLUDES

This MCP1630 Low-Cost Li-Ion Battery Charger Kit includes:

- The MCP1630 Low-Cost Li-Ion Battery Charger Board, 102-00069
- MCP1630 Low-Cost Li-Ion Battery Charger User's Guide, (DS51555).
- MCP1630 Data Sheet, "High-Speed, Microcontroller-Adaptable, Pulse Width Modulator", (DS21896).
- MCP6291/2/3/4/5 Data Sheet, "1.0 mA, 10 MHz, Rail-to-Rail Op Amp", (DS21812).
- PIC12F683 Data Sheet, "8-Pin Flash-Based, 8-Bit CMOS Microcontrollers with nanoWatt Technology", (DS41211).



## **Chapter 2. Installation and Operation**

#### 2.1 INTRODUCTION

The MCP1630 Low-Cost Li-Ion Battery Charger demonstrates Microchip's high-speed Pulse Width Modulator (PWM) (the MCP1630) used in a battery charger application. When used in conjunction with a microcontroller, the MCP1630 will control the power system duty cycle to provide output voltage or current regulation. The PIC12F683 microcontroller can be used to regulate output voltage or current, switching frequency and maximum duty cycle. The MCP1630 generates duty cycle and provides fast overcurrent protection based off various external inputs. External signals include the input oscillator, the reference voltage, the feedback voltage and the current sense. The output signal is a square-wave pulse. The power train used for the MCP1630 Low-Cost Li-Ion Battery Charger is a Single-Ended Primary Inductive Converter (SEPIC).

#### 2.2 FEATURES

The MCP1630 Low-Cost Li-Ion Battery Charger has the following features:

- · Programmed parameters modified in firmware
- · Factory Settings:
  - Preconditioning Charge Current = 200 mA
  - Preconditioning Threshold = 3 V
  - Constant Current Fast Charge = 1.5 A
  - Constant Voltage Charge = 4.2 V
  - Charge Termination Threshold = 100 mA
- Overvoltage protection (battery removed)
- Overcharge protection to prevent damaging the battery
- · Overcurrent protection in the event of a shorted battery
- Battery reversal protection
- · Input short circuit protection
- Overtemperature protection to prevent the battery from reaching too high a temperature during charge
- Soft-start capability by holding the reference voltage low during power-up
- The MCP1630 Low-Cost Li-Ion Battery Charger terminates charge by detecting a predefined charge current threshold during constant voltage charge, or a specified elapsed time
- The MCP1630 Low-Cost Li-Ion Battery Charger has the flexibility to optimize the charging algorithm for new battery technology, different battery chemistries or different battery pack configurations
- Proprietary features can be added by modifying the firmware contained in the PIC12F683
- The factory-programmed source code is available
- · Ability to adapt to environmental effects, such as ambient temperature

#### 2.3 GETTING STARTED

The MCP1630 Low-Cost Li-Ion Battery Charger is fully assembled and tested for charging single-cell, Li-Ion battery packs with the recommended charge profile for Li-Ion batteries. This board requires the use of an external input voltage source (+6V to +18V) and external load (battery or simulated battery load).

#### 2.3.1 Power Input and Output Connections

#### 2.3.1.1 POWERING THE MCP1630 LOW-COST LI-ION BATTERY CHARGER

- Apply the input voltage to the input terminal block, J1. The input voltage source should be limited to the 0V to +18V range. For normal operation, the input voltage should be between +6V and +18V. The input voltage must not exceed an absolute maximum of +20V.
- 2. Connect the positive side of the input source (+) to pin 1 of J1. Connect the negative or return side (-) of the input source to pin 2 of J1. Refer to Figure 2-1.

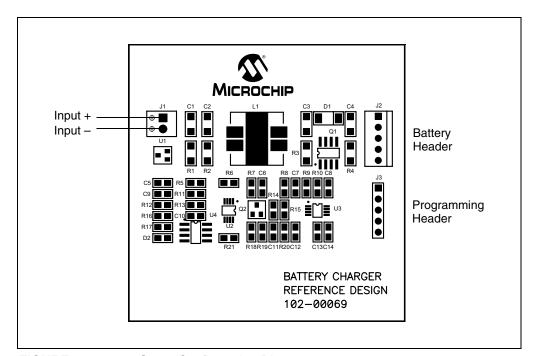


FIGURE 2-1: Setup Configuration Diagram.

#### 2.3.1.2 APPLY THE LOAD TO A BATTERY HEADER

- To apply a load to the MCP1630 Low-Cost Li-Ion Battery Charger, the positive side of the load (B+) should be connected to pin 1 of J2. The negative side of the load (B-) should be connected to pin 5 of J2. Care should be taken when using electronic loads or ground referenced loads.
- 2. A thermistor referenced to (B-) in the battery pack should be utilized. If a thermistor is not available or not desired, a 10 k $\Omega$  resistor should be placed between pins 4 and 5 of the battery header (J2).
- 3. The installed firmware will prevent the board from entering the Fast Charge mode if the battery terminal voltage is less than 3V. During power-up, the board will always trickle charge first, so using a purely resistive load will not work for trickle and fast-charge current. The best way to evaluate the charger is to use a single-cell Li-lon battery pack, or the recommended simulated battery load. Refer to Figure 2-2.

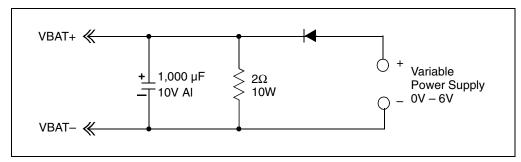


FIGURE 2-2: Simulated Battery Load.

#### 2.3.1.3 STATUS LED

 The MCP1630 Low-Cost Li-Ion Battery Charger has an LED to indicate charge status or fault status. Table 2-1 represents the state of the LED during various states of the charge cycle.

TABLE 2-1: STATUS OUTPUT

CHARGE CYCLE STATE	LED	
Qualification	OFF	
Preconditioning	ON	
Constant Current Fast Charge	ON	
Constant Voltage	ON	
Charge Complete	OFF	
Safety Timer Fault	Flashing (2 Hz, 50% duty cycle)	
Cell Temperature Invalid	Flashing (1 Hz, 50% duty cycle)	
Battery Disconnected	OFF	
Input Power Removed	OFF	

#### 2.3.1.4 PROGRAMMING

Header J3 is provided for In-Circuit System Programming™.

If the factory installed firmware is modified or if the PIC12F683 is reprogrammed, the board needs to be calibrated. To perform calibration, a 4.2V source should be applied to the battery header. Then, when input power is applied for the first time, the board will perform a self calibration. The LED will flash when the calibration has been completed. The 4.2V source should be removed and input power cycled for normal operation.

**NOTES:** 



## Appendix A. Schematic and Layouts


#### A.1 INTRODUCTION

This appendix contains the following schematics and layouts for the MCP1630 Low-Cost Li-lon Battery Charger.


Diagrams included in this appendix:

- · Board Schematic
- Board Assembly Drawing
- Board Top Overlay
- Board Top Layer
- Board Bottom Layer


#### A.2 BOARD SCHEMATIC

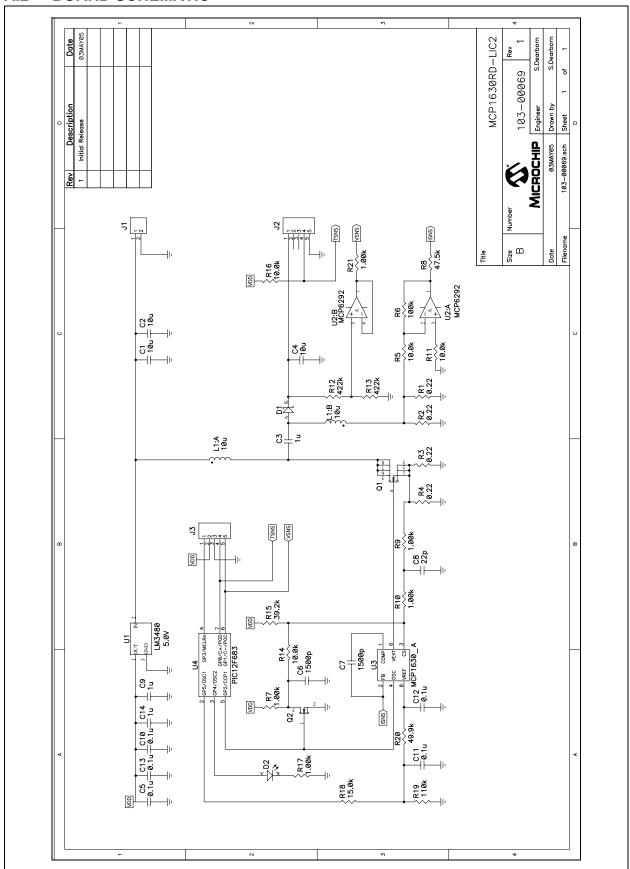


#### A.3 BOARD - ASSEMBLY DRAWING

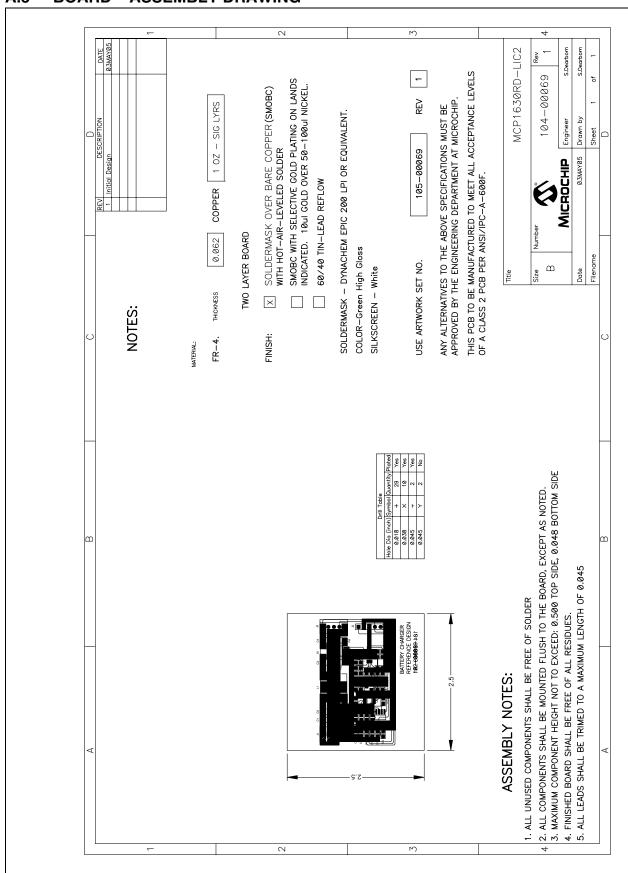


### A.4 BOARD - TOP OVERLAY

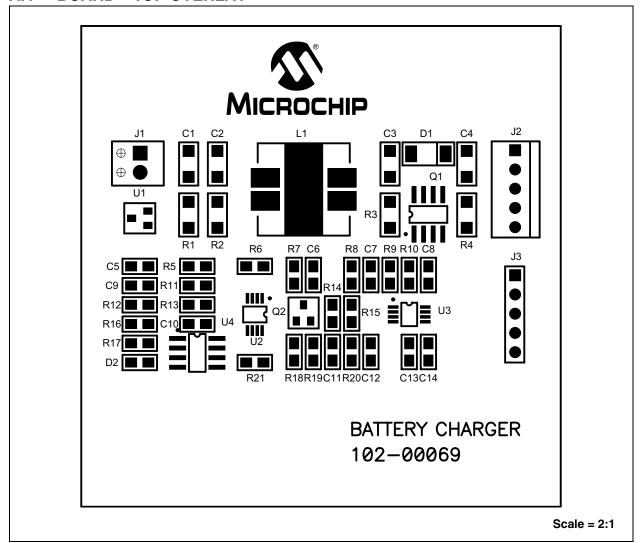

### A.5 BOARD - TOP LAYER

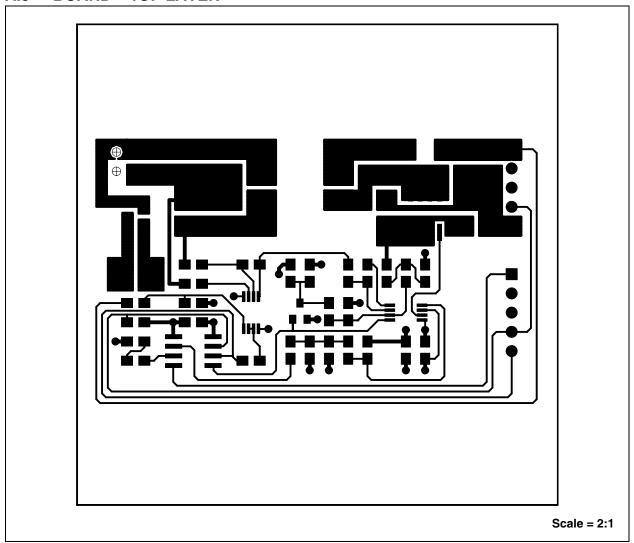

#### A.6 BOARD - BOTTOM LAYER

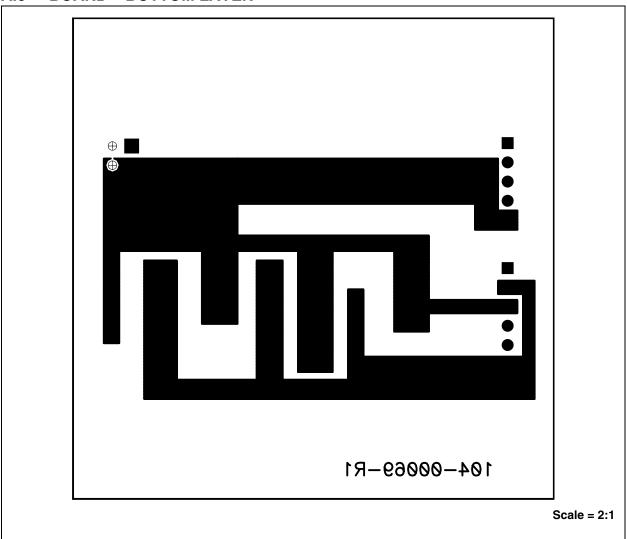



## Appendix B. Bill Of Materials (BOM)

#### TABLE B-1: BILL OF MATERIALS (BOM)

Qty.	Reference	Description	Mfgr.	Part Number
5	C5,C10,C11,C12,C13	0.1 μF, X7R Ceramic, 16V, 0805	Panasonic®-ECG	ECJ-2VB1C104K
2	C9,C14	1 μF, X5R Ceramic, 16V, 0805	Panasonic-ECG	ECJ-2FB1C105K
1	C8	22 pF, NPO Ceramic, 50V, 0805	Panasonic-ECG	ECJ-2VC1H220J
1	C7	1500 pF, X7R Ceramic, 100V, 0805	Panasonic-ECG	ECJ-2VB2A152K
1	C3	1 μF, X7R Ceramic, 25V, 1206	Panasonic-ECG	ECJ-3YB1E105K
3	C1,C2,C4	10 μF, X5R Ceramic, 25V, 1206	Panasonic-ECG	ECJ-3YB1E106M
1	L1	10 μH, Coupled Inductor, DRQ127	Coiltronics®	DRQ127-100
1	J3	Header, 5 Pos., 2.54 mm, HDR1X5	Molex <sup>®</sup>	22-03-2051
1	J2	Header, 5 Pos., 2.54 mm, Friction Lock, HDR1X5-FL	Molex <sup>®</sup>	22-23-2051
1	D2	Green LED, 0805	Lumex <sup>®</sup> Opto/Components	SML-LXT0805GW-TR
1	U1	5.0V, Voltage Regulator, SOT23	National Semicondutor	LM3480IM3-5.0
1	U3	PWM Building Block, MSOP8	Microchip Technology Inc.	MCP1630-E/MS
1	U2	Dual Operational Amplifier 10 MHz, MSOP8	Microchip Technology Inc.	MCP6292-E/MS
1	Q1	N-Channel MOSFET, SOIC8	International Rectifier	IRF7807V
1	Q2	N-Channel MOSFET, SOT23	Fairchild <sup>®</sup>	NDS7002A
1	U4	8-Bit FLASH MCU, SOIC8	Microchip Technology Inc.	PIC12F683-I/SN
5	R7,R9,R10,R17,R21	1.00 kΩ, 1/10W, Chip Resistor, 0805	Panasonic-ECG	ERJ-6ENF1001V
4	R5,R11,R14,R16	10.0 kΩ, 1/10W, Chip Resistor, 0805	Panasonic-ECG	ERJ-6ENF1002V
1	R18	15.0 kΩ, 1/10W, Chip Resistor, 0805	Panasonic-ECG	ERJ-6ENF1502V
1	R8	47.5 kΩ, 1/10W, Chip Resistor, 0805	Panasonic-ECG	ERJ-6ENF4752V
1	R20	49.9 kΩ, 1/10W, Chip Resistor, 0805	Panasonic-ECG	ERJ-6ENF4992V
1	R6	100 kΩ, 1/10W, Chip Resistor, 0805	Panasonic-ECG	ERJ-6ENF1003V
1	R19	110k, 1/10W, Chip Resistor, 0805	Panasonic-ECG	ERJ-6ENF1103V
2	R12,R13	422 kΩ, 1/10W, Chip Resistor, 0805	Panasonic-ECG	ERJ-6ENF4223V
4	R1,R2,R3,R4	0.22Ω, 1/4W, Chip Resistor, 1206	Panasonic-ECG	ERJ-8RQFR22V
1	D1	3.0A, 30V Schottky Diode, SMA	Toshiba <sup>®</sup>	CMS01 (TE12L)
1	J1	Terminal Block, 2 Pos., 2.54 mm, TB254-2	Phoenix Contact	1725656

MCP 1630 Low-Cost Battery Charger User's Guide				
NOTES:				



## **Appendix C. Evaluation Board Firmware**

#### C.1 DEVICE FIRMWARE

For the latest copy of the MCP1630 Low-Cost Battery Charger User's Guide firmware, visit our web site at www.microchip.com.

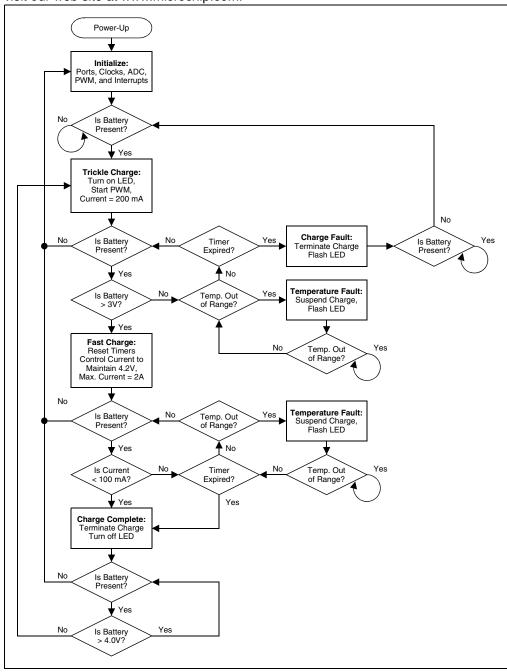


FIGURE C-1: Firmware Flowchart.



## WORLDWIDE SALES AND SERVICE

#### **AMERICAS**

**Corporate Office** 

2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200

Fax: 480-792-7277 Technical Support:

http://support.microchip.com

Web Address: www.microchip.com

Atlanta

Alpharetta, GA Tel: 770-640-0034 Fax: 770-640-0307

**Boston** 

Westborough, MA Tel: 774-760-0087 Fax: 774-760-0088

Chicago Itasca, IL

Tel: 630-285-0071 Fax: 630-285-0075

**Dallas** 

Addison, TX Tel: 972-818-7423 Fax: 972-818-2924

Detroit

Farmington Hills, MI Tel: 248-538-2250 Fax: 248-538-2260

Kokomo

Kokomo, IN Tel: 765-864-8360 Fax: 765-864-8387

Los Angeles

Mission Viejo, CA Tel: 949-462-9523 Fax: 949-462-9608

San Jose

Mountain View, CA Tel: 650-215-1444 Fax: 650-961-0286

**Toronto** 

Mississauga, Ontario,

Canada

Tel: 905-673-0699 Fax: 905-673-6509

#### ASIA/PACIFIC

Australia - Sydney Tel: 61-2-9868-6733

Fax: 61-2-9868-6755

China - Beijing

Tel: 86-10-8528-2100 Fax: 86-10-8528-2104

China - Chengdu

Tel: 86-28-8676-6200 Fax: 86-28-8676-6599

China - Fuzhou

Tel: 86-591-8750-3506 Fax: 86-591-8750-3521

China - Hong Kong SAR

Tel: 852-2401-1200 Fax: 852-2401-3431

China - Qingdao

Tel: 86-532-8502-7355 Fax: 86-532-8502-7205

China - Shanghai

Tel: 86-21-5407-5533 Fax: 86-21-5407-5066

China - Shenyang

Tel: 86-24-2334-2829 Fax: 86-24-2334-2393

China - Shenzhen

Tel: 86-755-8203-2660 Fax: 86-755-8203-1760

China - Shunde

Tel: 86-757-2839-5507 Fax: 86-757-2839-5571

China - Wuhan

Tel: 86-27-5980-5300 Fax: 86-27-5980-5118

China - Xian

Tel: 86-29-8833-7250 Fax: 86-29-8833-7256

#### ASIA/PACIFIC

India - Bangalore

Tel: 91-80-2229-0061 Fax: 91-80-2229-0062

India - New Delhi

Tel: 91-11-5160-8631 Fax: 91-11-5160-8632

India - Pune

Tel: 91-20-2566-1512 Fax: 91-20-2566-1513

Japan - Yokohama

Tel: 81-45-471-6166 Fax: 81-45-471-6122

Korea - Gumi

Tel: 82-54-473-4301 Fax: 82-54-473-4302

Korea - Seoul

Tel: 82-2-554-7200 Fax: 82-2-558-5932 or 82-2-558-5934

Malaysia - Penang

Tel: 60-4-646-8870 Fax: 60-4-646-5086

Philippines - Manila

Tel: 63-2-634-9065 Fax: 63-2-634-9069

**Singapore** Tel: 65-6334-8870

Fax: 65-6334-8850 **Taiwan - Hsin Chu** 

Tel: 886-3-572-9526

Fax: 886-3-572-6459 **Taiwan - Kaohsiung** 

Tel: 886-7-536-4818

Fax: 886-7-536-4803 **Taiwan - Taipei** 

Tel: 886-2-2500-6610 Fax: 886-2-2508-0102

Thailand - Bangkok

Tel: 66-2-694-1351 Fax: 66-2-694-1350

#### **EUROPE**

Austria - Wels

Tel: 43-7242-2244-399 Fax: 43-7242-2244-393

**Denmark - Copenhagen** Tel: 45-4450-2828

Fax: 45-4485-2829

France - Paris

Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

**Germany - Munich** 

Tel: 49-89-627-144-0 Fax: 49-89-627-144-44

Italy - Milan

Tel: 39-0331-742611 Fax: 39-0331-466781

Netherlands - Drunen Tel: 31-416-690399

Fax: 31-416-690340 Spain - Madrid

Tel: 34-91-708-08-90

Fax: 34-91-708-08-91 **UK - Wokingham** 

Tel: 44-118-921-5869 Fax: 44-118-921-5820

10/31/05