

3/8

В

Ε

PART NUMBER	CODE NUMBER	NUMBER OF CONTACTS	DIMENSION OF CONNECTOR, FPC, PCB MOUNTING PATTERN AND METAL MASK								DIMENSION OF DRAWING FOR PACKING				
			С	D	Е	F	G	Ι	J	К	L	Ν	М	P	Q
FH42-7S-0.3SHW(10)	CL580-2308-6-10	7	4.2	1.2	1.8	2.95	3.68	3.65	2,62	4.6	16	_	7.5	17.4	21.4
FH42-11S-0.3SHW(10)	CL580-2306-0-10	11	5.4	2.4	3	4. 15	4.88	4.85	3.82	5.8	16	_	7.5	17.4	21.4
FH42-13S-0.3SHW(10)		13	6	3	3.6	4.75	5.48	5. 45	4. 42	6.4	16	_	7.5	17.4	21.4
FH42-15S-0.3SHW(10)	CL580-2302-0-10	15	6,6	3.6	4.2	5.35	6.08	6.05	5.02	7	16	_	7.5	17.4	21.4
FH42-17S-0.3SHW(10)		17	7.2	4.2	4.8	5.95	6.68	6.65	5.62	7.6	24	_	11.5	25.4	29. 4
FH42-19S-0.3SHW(10)	CL580-2305-8-10	19	7.8	4.8	5.4	6.55	7.28	7.25	6.22	8.2	24	_	11.5	25.4	29. 4
FH42-21S-0.3SHW(10)		21	8.4	5.4	6	7. 15	7.88	7.85	6.82	8.8	24	_	11.5	25.4	29. 4
FH42-23S-0.3SHW(10)	CL580-2309-9-10	23	9	6	6.6	7.75	8.48	8.45	7.42	9.4	24	_	11.5	25.4	29. 4
FH42-25S-0.3SHW(10)		25	9.6	6.6	7.2	8.35	9.08	9.05	8.02	10	24	_	11.5	25.4	29. 4
FH42-27S-0,3SHW(10)		27	10.2	7.2	7.8	8.95	9.68	9.65	8.62	10.6	24	_	11.5	25.4	29. 4
FH42-31S-0.3SHW(10)	CL580-2301-7-10	31	11.4	8.4	9	10.15	10.88	10.85	9.82	11.8	24	_	11.5	25.4	29.4
FH42-33S-0.3SHW(10)		33	12	9	9.6	10.75	11.48	11.45	10.42	12.4	24	_	11.5	25.4	29. 4
FH42-35S-0.3SHW(10)		35	12.6	9.6	10.2	11.35	12.08	12.05	11.02	13	24	_	11.5	25.4	29.4
FH42-39S-0.3SHW(10)	CL580-2311-0-10	39	13.8	10.8	11.4	12.55	13.28	13.25	12.22	14.2	24	_	11.5	25.4	29.4
FH42-41S-0.3SHW(10)	CL580-2304-5-10	41	14.4	11.4	12	13. 15	13.88	13.85	12.82	14.8	24	_	11.5	25.4	29. 4
FH42-45S-0.3SHW(10)		45	15.6	12.6	13.2	14.35	15.08	15.05	14.02	16	32	28.4	14.2	33.4	37.4
FH42-51S-0.3SHW(10)		51	17.4	14.4	15	16. 15	16.88	16.85	15.82	17.8	32	28.4	14.2	33.4	37.4

* CONTACT POSITIONS WITHOUT CODE NUMBERS ARE CURRENTLY UNDER PLANNING. CONTACT HIROSE FOR DETAILED INFORMATION ABOUT PRODUCT VARIATION.

<DIMENSION TABLE>

HRS	DRAWING NO.	EDC3-322505-01		
	PART NO.	FH42-**S-0.3SHW(1	0)	
	CODE NO.	CL580	2	4
	7	8		

В

D

Ε


FORM HC0011-5-8 1 2 3 4 5

This connector features small, thin and back flip design, requiring delicate and careful handling. To prevent connector/FPC breakege and contact failure (meting failure, FPC pattern breakage, etc), read through the instructions shown below and handle the connector properly. Each values indicating here are for reference and may differ from standard value. lOperation and Precautions 1. Initial condition


Actuator does not have to be operated before inserting FPC. as the connector is delivered with the actuator opened.

[Caution]

- -Do not close the actuator before inserting FPC. Closing the actuator without FPC could make the contact gap smaller, which could increase the FPC insertion force.
- -Do not insert FPC or operate actuator before mounting.



- Open when deliverd -

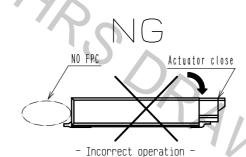

- Incorrect operation

2. How to insert FPC

This connector has contacts on the top. Insert the FPC with the exposed conductors face up.


[Caution]


FORM HC0011-5-8

- -Insert the FPC with the actuator opened.
- -Do not insert the FPC with the conductor surface face down.

- Incorrect operation

- -Insert the FPC into the connector opening horizontally to the PCB plane.
- Insert it properly to the very end.

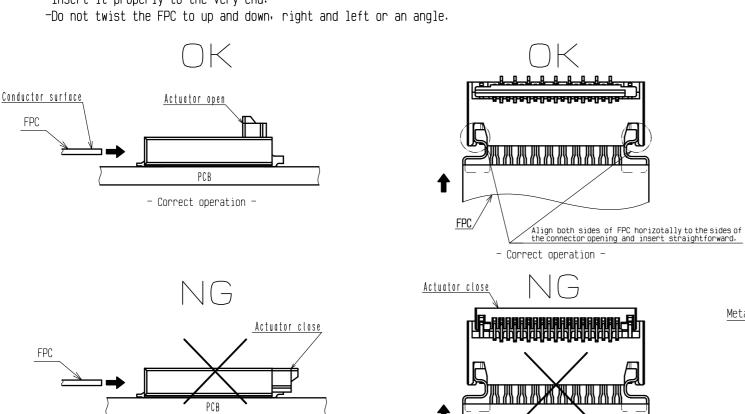


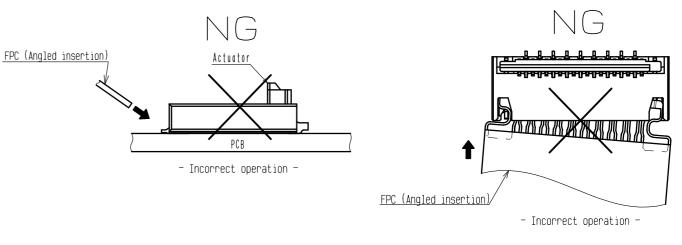

3. FPC insertion check

Metal fittings guide the FPC tabs to the correct position. Make sure that the FPC tabs are located in proper position as shown in the figure below after FPC insertion.

-Do not insert the FPC at an angle and/or stop it before insertion is complete.

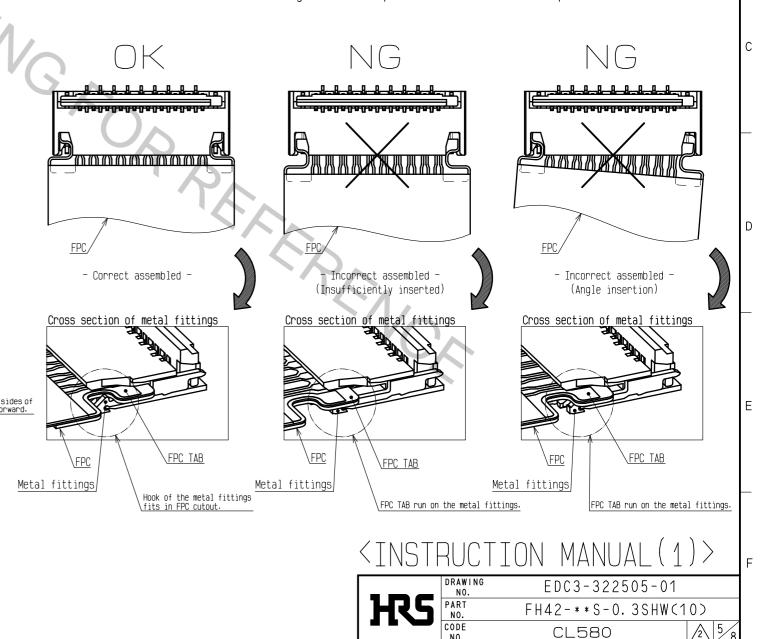

FORM HC0011-5-8 1

4. How to lock NG Apply load to rotate the actuator by 90 degree after inserting the FPC. Close the actuator at the center Do not operate the actuator at one end only [Caution] -The actuator rotates around the rotational axis as shown below. -Do not rotate the actuator to the counter direction. Do not pinch or pick the actuator to lift. -Operate the actuator by hand without using sharp tool such as Tweezers. -To close the actuator operate at the center of the actuator. -To close the actuator, do not operate the actuator at one end only. -Do not apply excess force to the housing during the operation. В [Actuator movable range] (Side view) - Incorrect operation -- Correct operation -(Rotational axis Do not apply excess force to the housing during the operation. Actuator PCB - Correct operation - Incorrect operation -NG Actuator <INSTRUCTION MANUAL(2)> - Incorrect operation - Incorrect operation Actuator receives inappropriate force in reverse direction. EDC3-322505-01 FH42-**S-0.3SHW(10)

4

D

Ε

6/8

CL580

В

FORM HC0011-5-8

Open the actuator at the center Do not operate the actuator at one end only 5. How to unlock Slowly flip up the actuator to release the lock. -The actuator is opened up to the movable limit, 90 degree. Do not open the actuator beyond the specified degree or apply excess force to the actuator. -Open the actuator right above. Do not attempt to open further or to open it by applying horizontal force as this may cause its damage. -Please note that the connector is back flip style connector. and the opening for FPC insertion and the actuator face the opposite direction. Do not try to lift the actuator at the FPC - Correct operation -– Incorrect operation insertion opening side. 6. How to remove FPC -Operate the actuator by hand without using sharp tool such as Tweezers. -To open the actuator, operate at the center of the actuator. After rotating the actuator to the fully opened position carefully withdraw the FPC pulling out at 30 degree angle to the PCB mounting surface. -To open the actuator do not operate the actuator at one end only. -This connector has a temporary FPC holding structure with metal fittings. For FPC removal do not pull out the FPC horizontally.
-Do not attempt to pull the FPC without unlocking the actuator. Actuator open PCB Correct operation Correct operation Actuator ope Actuator ope - Correct operation Actuator receives inappropriate force in reverse direction. FPC (Angled withdrawal - Incorrect operation -\Metal fittings Incorrect operation -- Incorrect operation - \bigcirc Actuator close Actuator sharp tool Actuator - Incorrect operation -- Incorrect operation - Incorrect operation -EDC3-322505-01 FH42-**S-0.3SHW(10)

 $\sqrt{2}$

CL580

[Precautions for design]

1. During FPC wiring ,ensure that stress is not applied directly to the connector. Do not bend the FPC excessively near the connector during use ,or it may cause contact failure or FPC breakage. Stabilizing the FPC is recommended.


- 2. Keep a sufficient FPC insertion space in the stage of the layout in order to avoid incorrect FPC insertion.
- Appropriate FPC length and component layout are recommended for assembly ease. Too short FPC length makes assembly difficult.
- 3. Follow the recommended PCB mounting pattern, stencil opening design and the FPC design.
- 4. Make adjustments with the FPC manufacturer for FPC bending performance and wire breakage.
- 5. Keep spaces for the actuator movement and its operation for PCB design and component layout.


IFPC routing after connection


Depending on a FPC rounding, a load is applied to the connector, and a contact failure may occur. To prevent a failure, take the following notes into a consideration during mechanism design.


[Caution]

- -Avoid appplying forces to FPC in vertical or horizontal derections.
- In addition, avoid pulling up and down on the FPC.
- -When fixing FPC after FPC cabling avoid pulling FPC and route the wire FPC with slack.
- In this regard, the stiffener is parallel to the PCB.
- -Do not mount other components touching to the FPC underneath the FPC stiffener.

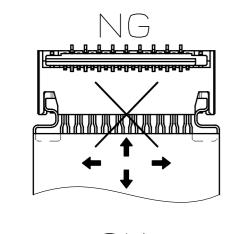



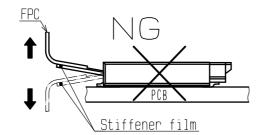

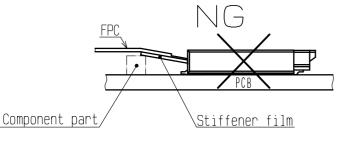

Instructions for mounting on the PCB

♦Warp of PCB

Minimize warp of the PCB as much as possible.

Lead co-planarity including reinforced metal fittings is 0.08 mm or less.

Too much warp of the PCB may result in a soldering failure.

♦Flexible board design

Please make sure to put a stiffener on the backside of the flexible board. We recommend a glass epoxy material with the thickness of 0.3mm MIN.

♦Load to Connector

Do not add 0.5N or greater external force when unreel or pick and place the connector etc. or it may get broken.

In addition, do not insert the FPC or operate the connector before mounting.

♦Reflow temperature profile

Apply reflow temperature profile within the specified conditions.
In individual applications, the actual temperature may vary,
depending on solder paste type volume/thickness and PCB size/thickness. Consult your solder paste and equipment manufacturer for specific recommendations.

INSTRUCTIONS FOR PCB HANDLING AFTER MOUNTING THE CONNECTOR!

♦Load to PCB


Splitting a large PCB into several pieces Screwing the PCB

Avoid the handling described above so that no force is exerted on the PCB during the assembly process. Otherwise, the connector may become defective.

♦Amount of Warp

The warp of a 100mm wide PCB should be 0.5 mm or less.

The warp of PCB suffers stress on connector and the connector may become defective.

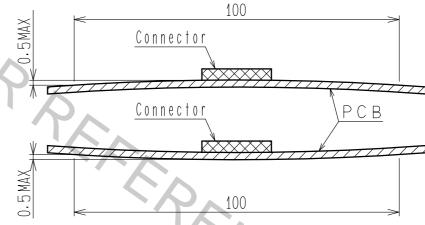


Other instructions

♦Instructions on manual soldering

Follow the instructions shown below when soldering the connector manually during repair work, etc.

- 1. Do not perform manual soldering with the FPC inserted into the connector.
- 2. Do not heat the connector excessively. Be very careful not to let the soldering iron contact any parts other than connector leads. Otherwise, the connector may be deformed or melt.
- 3. Do not supply excessive solder (or flux).

If excessive solder (or flux) is supplied on the terminals, solder or flux may adhere to the contacts or rotating parts of the actuator, resulting in poor contact or a rotation failure of the actuator. Supplying excessive solder to the metal fittings may hinder actuator rotation. resulting in breakage of the connector.



FORM HC0011-5-8